



HSL potter's wheels

Danger notes:



Do not use the wheel for anything else than for throwing clay.

This product is designed for the creation of ceramic art.



Do not place any items other than ceramic material, on the wheel-head.

Water buckets and tools should be placed on the attached workspace.



Repair and modification by the user are prohibited.

May cause electrocution or injury.



Do not insert hands or objects into openings or moving parts.

May cause electrocution or injury.



Do not leave children unattended near the potter's wheel.

Injury may occur.



Keep tools and small parts out of the reach of children.

May cause injury.



Clean the pottery wheel as described in the manual!

Do never use the dishwasher or other electrical cleaning devices.



Misuse will lead to expiration of your warranty claim.

Warnings:



If you notice smoke, strange smells or sounds, shut down the machine immediately.

Bring the master switch to "o" and unplug the power chord. Please inform the manufacturer.



Handle with extreme care when moving or lifting.

Serious injury can occur if moving or lifting is done without care.



Do not plug or unplug the power chord with wet hands.

May cause electrocution.